



MSS® -Band Slide

Soap-Based Tape Lubricant

Food
Hygiene

Features

Band Slide is a soap-based liquid belt slider used in dipping and drip systems in the food industry. It can be used in all systems related to bottle handling in the beverage industry. It is used in dipping or drip apparatus. For chain maintenance and cleaning, all residues must be thoroughly cleaned with an alkaline cleaner before the first use of Band Slide. At the end of the working hour, the belts should be thoroughly cleaned from both sides with a strong water spray. This is especially important for belt chains made of carbon steel, as chipping (wear) can occur due to dirty bottles and dry residues. After these processes, the cleaned chains should be moistened with Band Slide and left until the next day. It can be used on all types of belts. Suitable for glass bottles and base-coated PET bottles.

Composition: 5–15% soap, anionic surfactants, preservatives, and solvents. Density: $1.01 \pm 0.1 \text{ g/cm}^3$ (at 20°C)

Physical Properties: Yellow, clear liquid form

Usage and Quantity

Used at a concentration of 1–2% in immersion systems. Generally, it is recommended that long transport chains be treated with more lubricant than shorter ones. If there are droppers on the belts, it is necessary to work with a concentration of 20–100%. The given figures are for informational purposes only. Concentrations may vary depending on the specific conditions of each operation.

Concentration Determination: A 100 ml sample is taken from the used treatment water, 3-5 drops of methyl orange are added, and titrated with 0.1 N HCl from light yellow to dark pink. (Consumption = b) A 100 ml sample is taken from the Band Slide solution used in the treatment, 3-5 drops of methyl orange are added, and titrated with 0.1 N HCl from light yellow to dark pink. (Consumption = a)

Band Slide Concentration % = $(b - a) \times \text{Factor}$

Factor = 0.2

Storage: Store in a cool and dry place. Do not stack more than three containers on top of each other. Shelf life is three years from the date of manufacture.


Safety Symbol:



ISO 9001 : 2000
ISO 14001 : 2004
ISO 22000
HACCP / TS 13001
OHSAS 18001 / TS 18001



Sağlık Bakanlığı onaylıdır
TSE (TSEK)
Standartlarına göre üretilmiştir.

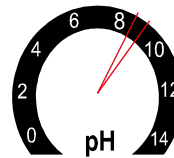

CLEANING COLOR CODE



Danger
Symbol
None

No protective measures are necessary.

Product Code: MSS64017

Packaging Type: 20 L (18,2 KG)

Amount Consumed:

Address: Ferhatpaşa Mahallesi Anadolu Caddesi No 14 Ataşehir İstanbul

Telephone: (0216) 660 08 98

Fax: (0216) 660 08 99

E – Mail: info@mssgrup.com